



Goodwrench

Goodwrench Maintenance Schedule

2007 GM Cars and Trucks with GM Oil Life System (OLS)

You chose your GM vehicle for a reason. It fits your life. It fits your style. When you bought a GM vehicle, you bought into the GM promise of performance and reliability. We at Goodwrench are out to keep that promise by using only GM-trained technicians who utilize the latest tools and technology to diagnose the needs of your GM vehicle. One way we are doing this is with our GM Oil Life System (GMOLS). With this tool, all the guessing of routine maintenance is removed. Now, when the light on your dash comes on, you come in to us. It's that simple. And it's just one way we're working to be the perfect wrench for your GM vehicle.



Goodwrench

Simplified Maintenance I and II

2007 GM Cars and Trucks

with Gasoline Engines and **with** GM Oil Life System (OLS)

Required services for most vehicles are described by the terms Maintenance I and Maintenance II. Use Maintenance I if the CHANGE ENGINE OIL light comes on within 10 months of the vehicle purchase or when Maintenance II was the last service performed.

The first service should be Maintenance I; the second should be Maintenance II. Alternate between the two schedules thereafter. Depending upon your driving habits, Maintenance II may be required more often.

Refer to your Owner's Manual for specific maintenance requirements.

NOTICE: It is important to check your engine oil regularly and keep it at the proper level. Failure to maintain proper oil level can result in expensive engine repairs not covered by the vehicle warranty.

It is important to regularly check your tires for wear and proper inflation. Failure to maintain properly inflated tires can result in premature tire wear, vehicle damage, or personal injury.

MAINTENANCE I SCHEDULE	\$ CARS
• Change engine oil and filter. Reset oil life system. (See "Engine Oil." <i>An Emission Control Service.</i>)	\$ TRUCKS
• Visually check for any leaks or damage.	
• Rotate and inspect tires. Check inflation pressures and wear.	
• Inspect brake system, including brake lines, hoses, pads, calipers, wheel cylinders, rotors, and drums.	
• Check engine coolant and windshield washer fluid.	
• Perform any needed additional services.	
• <i>Trucks:</i> Lubricate front suspension, ball joints, steering linkage, and parking brake cable.	
• <i>Trucks with Allison Transmission only:</i> Inspect external control-main filter; replace if necessary.	
<i>Additional recommended services and costs, resulting from inspections performed, will be brought to your attention.</i>	

MAINTENANCE II SCHEDULE	\$ CARS
• Change engine oil and filter. Reset oil life system. (See "Engine Oil." <i>An Emission Control Service.</i>)	\$ TRUCKS
• Visually check for any leaks or damage.	
• Inspect engine air cleaner filter; replace if necessary.	
• Rotate and inspect tires. Check inflation pressures and wear.	
• Inspect brake system, including brake lines, hoses, pads, calipers, wheel cylinders, rotors, and drums.	
• Check engine coolant and windshield washer fluid.	
• Inspect engine cooling system.	
• Lubricate body components.	
• Inspect wiper blades for wear or cracking.	
• Inspect restraint system components.	
• Inspect suspension and steering components.	
• Check transmission/transaxle fluid level and add fluid as needed.	
• <i>Trucks without a filter restriction indicator:</i> Inspect engine air cleaner filter.	
• <i>Trucks/Vans:</i> Fuel filter service; replace as necessary.	
• <i>Trucks/Vans:</i> Check air intake.	
• Perform any needed additional services.	
<i>Additional recommended services and costs, resulting from inspections performed, will be brought to your attention.</i>	

Additional Required Services

In addition to Maintenance I and II, the following services are recommended at the mileage indicated.

AT 25,000 MILES	\$ CARS
<ul style="list-style-type: none"> • Inspect fuel system for damage or leaks. 	\$ TRUCKS
<ul style="list-style-type: none"> • Inspect exhaust system for loose or damaged components. 	
<ul style="list-style-type: none"> • <i>Trucks</i> with 6-speed manual transmission only: Change clutch plate fluid. 	
<ul style="list-style-type: none"> • <i>Trucks</i> with Allison Transmission only: Change automatic transmission fluid and filter (severe service). 	

AT 50,000 MILES	\$ CARS
<ul style="list-style-type: none"> • Inspect fuel system for damage or leaks. 	\$ TRUCKS
<ul style="list-style-type: none"> • Inspect exhaust system for loose or damaged components. 	
<ul style="list-style-type: none"> • Replace engine air cleaner filter. 	
<ul style="list-style-type: none"> • Change automatic transmission/transaxle fluid and filter (severe service). 	
<ul style="list-style-type: none"> • <i>Trucks</i> with Allison Transmission only: Change automatic transmission fluid and filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i>: Replace fuel filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i>: Inspect evaporative control system lines, hoses, and valves. 	
<ul style="list-style-type: none"> • <i>Trucks</i> without a filter restriction indicator: Replace engine air cleaner filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i> with 6-speed manual transmission only: Change clutch plate fluid (at least every 24 months). 	
<ul style="list-style-type: none"> • <i>Trucks</i> with four-wheel drive and automatic transfer case only: Change transfer case fluid and check vent hose at transfer case. 	

AT 75,000 MILES	\$ CARS
<ul style="list-style-type: none"> • Inspect fuel system for damage or leaks. 	\$ TRUCKS
<ul style="list-style-type: none"> • Inspect exhaust system for loose or damaged components. 	
<ul style="list-style-type: none"> • <i>Trucks</i>: Replace fuel filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i> without a filter restriction indicator: Replace engine air cleaner filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i> with 6-speed manual transmission only: Change clutch plate fluid (at least every 24 months). 	
<ul style="list-style-type: none"> • <i>Trucks</i> with Allison Transmission only: Change automatic transmission fluid and filter (severe service only). 	

AT 100,000 MILES	\$ CARS
<ul style="list-style-type: none"> • Inspect fuel system for damage or leaks. 	\$ TRUCKS
<ul style="list-style-type: none"> • Inspect exhaust system for loose or damaged components. 	
<ul style="list-style-type: none"> • Replace engine air cleaner filter. 	
<ul style="list-style-type: none"> • Change automatic transmission/transaxle fluid and filter (severe service). 	
<ul style="list-style-type: none"> • Replace spark plugs. 	
<ul style="list-style-type: none"> • V8 engine only: Inspect spark plug wires. (<i>An Emission Control Service.</i>) 	
<ul style="list-style-type: none"> • <i>Trucks</i>: Replace fuel filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i>: Inspect evaporative control system lines, hoses, and valves. 	
<ul style="list-style-type: none"> • <i>Trucks</i>: Replace spark plugs. (<i>An Emission Control Service.</i>) 	
<ul style="list-style-type: none"> • <i>Trucks</i> without a filter restriction indicator: Replace engine air cleaner filter. 	
<ul style="list-style-type: none"> • <i>Trucks</i> with 6-speed manual transmission only: Change clutch plate fluid (at least every 24 months). 	
<ul style="list-style-type: none"> • <i>Trucks</i> with Allison Transmission only: Change automatic transmission fluid and filter (normal and severe service). 	
<ul style="list-style-type: none"> • <i>Trucks</i> with four-wheel drive and automatic transfer case only: Change transfer case fluid and check vent hose at transfer case. 	

AT 125,000 MILES	\$ CARS
• Inspect fuel system for damage or leaks.	\$ TRUCKS
• Inspect exhaust system for loose or damaged components.	
• <i>Trucks</i> : Replace fuel filter.	
• <i>Trucks</i> without a filter restriction indicator: Replace engine air cleaner filter.	
• <i>Trucks</i> with 6-speed manual transmission only: Change clutch plate fluid (at least every 24 months).	
• <i>Trucks</i> with Allison Transmission only: Change automatic transmission fluid and filter (severe service).	

AT 150,000 MILES	\$ CARS
• Inspect fuel system for damage or leaks.	\$ TRUCKS
• Inspect exhaust system for loose or damaged components.	
• Replace engine air cleaner filter.	
• Change automatic transmission/transaxle fluid and filter (severe service).	
• Engine cooling system service (or every 5 years, whichever occurs first).	
• Inspect engine accessory drive belt.	
• <i>Trucks</i> : Inspect evaporative control system lines, hoses, and valves.	
• <i>Trucks</i> : Replace fuel filter.	
• <i>Trucks</i> without a filter restriction indicator: Replace engine air cleaner filter.	
• <i>Trucks</i> with 5-speed manual transmission only: Change manual transmission fluid.	
• <i>Trucks</i> with 6-speed manual transmission only: Change clutch plate fluid (at least every 24 months).	
• <i>Trucks</i> with Allison Transmission only: Change automatic transmission fluid and filter (normal and severe service).	
• <i>Trucks</i> with four-wheel drive and automatic transfer case only: Change transfer case fluid and check vent hose at transfer case for kinks and proper installation.	

SERVICE MENU

Change engine oil and filter	\$
Replace fuel filter	\$
Recharge battery and load-test charging system	\$
Replace windshield wiper blade inserts (front, two)	\$
Electronic wheel balance (includes tire rotation)	\$
Align front suspension	\$
Align front and rear suspension	\$
Air conditioner inspection and performance test	\$
Adjust headlamp alignment and aim	\$
Engine cooling system service	\$
Replace two gas shocks	\$
Replace two struts	\$
Replace front brake pads	\$
Replace rear brake shoes	\$
Emission inspection	\$
Brake system inspection	\$
Replace engine air cleaner filter	\$
Belts and hoses inspection	\$

PRICES SUBJECT TO CHANGE WITHOUT NOTICE. PRICES MAY VARY BY MODEL LINE.