


SIR Disabling and Enabling Zones

The SIR system has been divided into Disabling and Enabling Zones. When performing service on or near SIR components or SIR wiring, it may be necessary to disable the SIR components in that zone.

It may be necessary to disable more than one zone depending on the location of other SIR components and the area being serviced, refer to *SIR Zone Identification Viewson page 2-65*. Refer to the illustration below, to identify the specific zone or zones in which service will be performed. After identifying the zone or zones, proceed to the disabling and enabling procedures for that particular zone or zones.

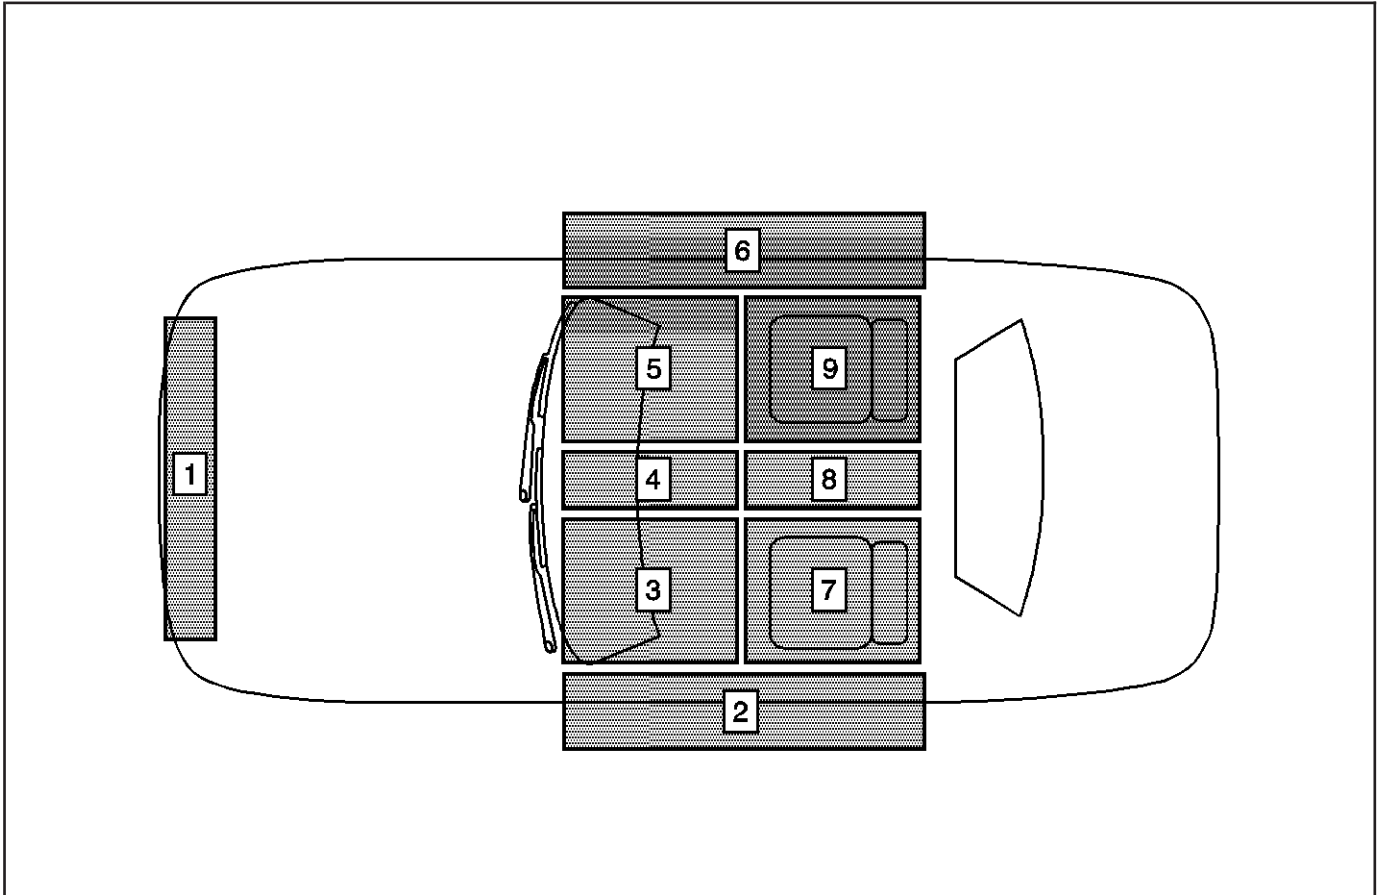

853778

Zone	Description
1	Inflatable Restraint Front End Sensors. Refer to <i>SIR Disabling and Enabling Zone 1 on page 2-67</i> .
2	Driver/Side Impact Sensor (SIS). Refer to <i>SIR Disabling and Enabling Zone 2 on page 2-69</i> .
3	Inflatable Restraint Steering Wheel Module and Coil. Refer to <i>SIR Disabling and Enabling Zone 3 on page 2-71</i> .
4	Inflatable Restraint Sensing and Diagnostic Module (SDM). Refer to <i>SIR Disabling and Enabling Zone 4 on page 2-73</i> .
5	Inflatable Restraint Instrument Panel (I/P) Module. Refer to <i>SIR Disabling and Enabling Zone 5 on page 2-77</i> .
6	Passenger/Side Impact Sensor (SIS). Refer to <i>SIR Disabling and Enabling Zone 6 on page 2-79</i> .
7	Driver Seat with LF Side Impact Module and Seat Belt Pretensioner. Refer to <i>SIR Disabling and Enabling Zone 7 on page 2-81</i> .
8	Not Used
9	Passenger Seat with RF Side Impact Module and Seat Belt Pretensioner. Refer to <i>SIR Disabling and Enabling Zone 9 on page 2-83</i> .