


SIR Disabling and Enabling Zone 5

Disabling Procedure


1. Turn the steering wheel so that the vehicle's wheels are pointing straight ahead.
2. Place the ignition in the OFF position.
3. Remove the kick-up panel (2) to expose the instrument panel (I/P) fuse block.
4. Remove the I/P fuse block cover (1).

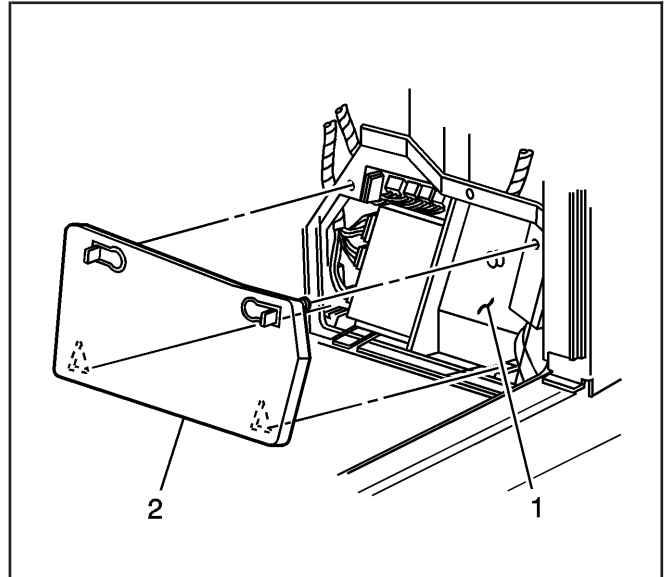

1246577


Important: With the SDM fuse removed and the ignition in the ON position, the AIR BAG warning indicator illuminates. This is normal operation, and does not indicate an SIR system malfunction.

5. Locate the SDM fuse within the I/P fuse block.
6. Remove the SDM fuse from the I/P fuse block.

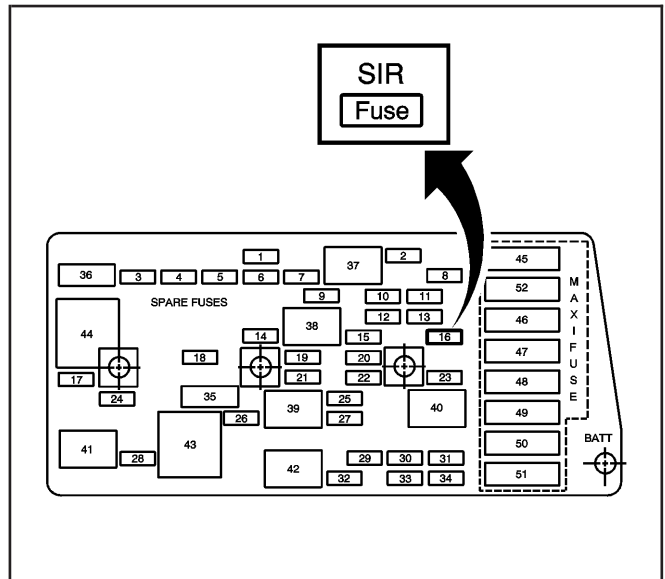


1246574


7. Remove the right/passenger sound insulator from the I/P.
8. Locate the I/P module yellow connector just right of console and remove the connector position assurance (CPA) from the vehicle harness yellow connector.
9. Disconnect the I/P module yellow connector from the vehicle harness yellow connector.

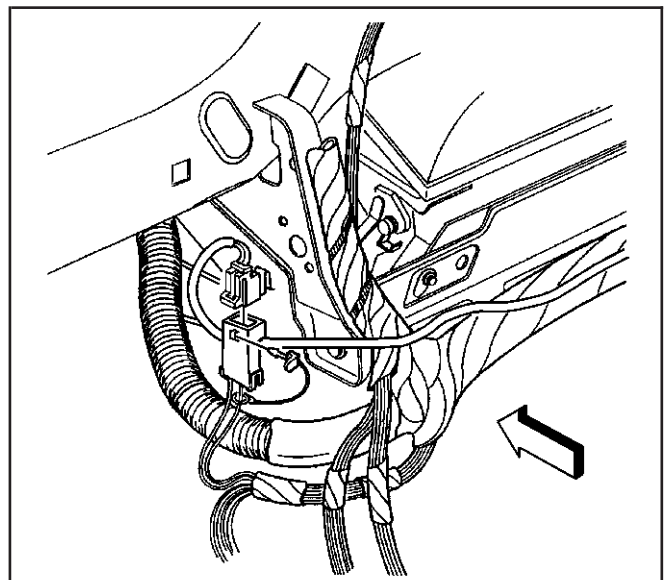

217468

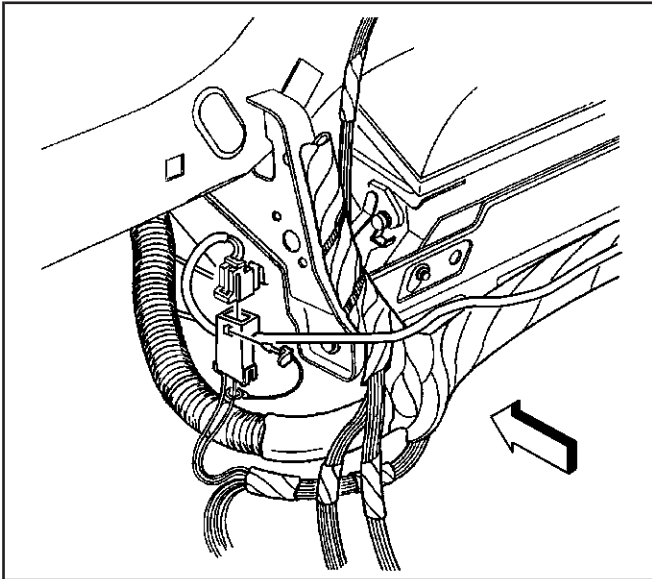

217468

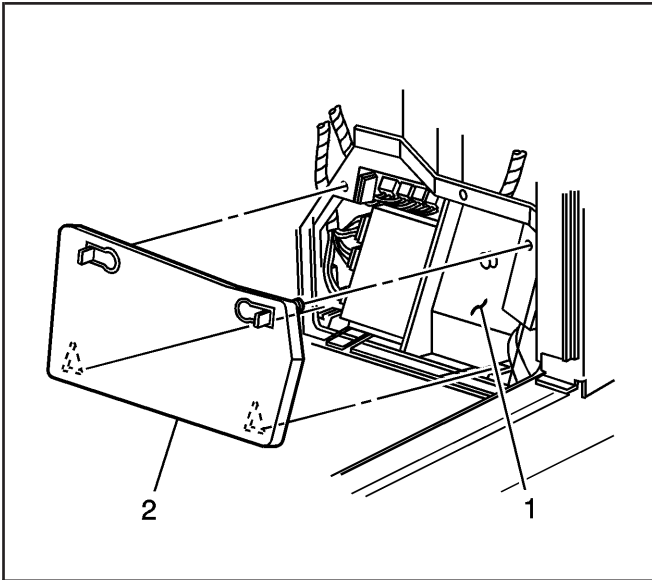

1246577

Enabling Procedure

1. Place the ignition in the OFF position.
2. Connect the I/P module yellow connector to the vehicle harness yellow connector.
3. Install the CPA to the vehicle harness yellow connector.
4. Install the right sound insulator to the I/P.
5. Install the SDM fuse into the I/P fuse block.
6. Install the I/P fuse block cover (1).
7. Install the kick-up panel (2) to cover the I/P fuse block (1).
8. Use caution while reaching in and place the ignition to the ON position.
The AIR BAG indicator will flash then turn OFF.
9. Perform the Vehicle System Check if the AIR BAG warning indicator does not operate as described.