


Component Locator

SIR Zone Identification Views

The SIR Zone Identification Views shown below illustrate the approximate location of all SIR components available for the vehicle. This will assist in determining the appropriate SIR Disabling and Enabling Zones for a given service procedure.

2003 Hummer H2

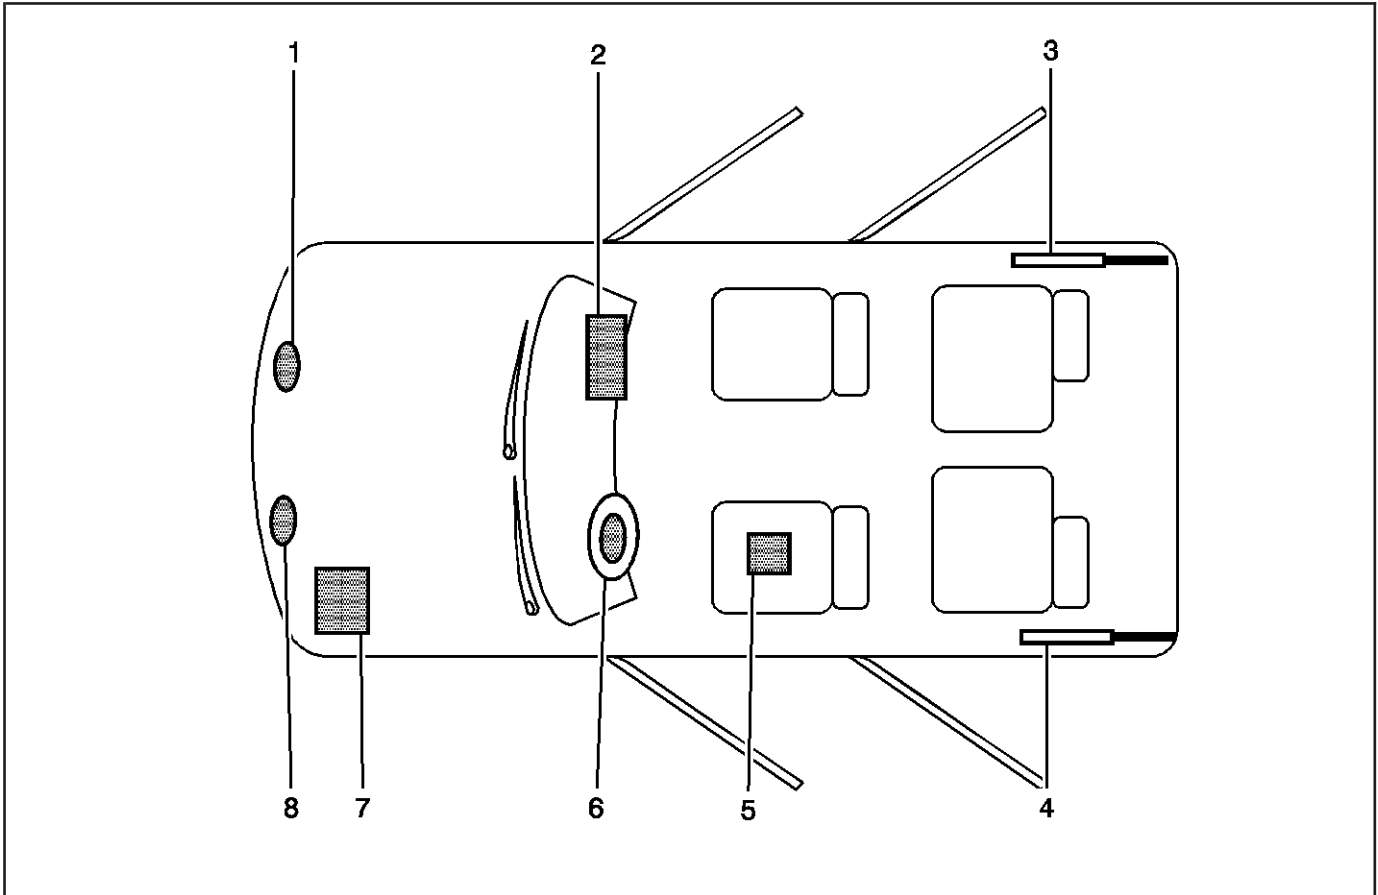

869921

Legend

- | | |
|--|--|
| (1) Inflatable Restraint Electronic Frontal Sensor (EFS)—Located on the front of the vehicle in the engine compartment | (5) Inflatable Restraint Sensing and Diagnostic Module (SDM)—Located underneath the LF/driver seat. |
| (2) Inflatable Restraint IP Air Bag—Located at the top right under the instrument panel | (6) Inflatable Restraint Steering Wheel Air Bag—Located on the steering wheel |
| (3) Rear Lift Gate Strut—A gas shock is located between rear lift gate and body on the passenger side | (7) Vehicle Battery—Located under Hood on the left side |
| (4) Rear Lift Gate Strut—A gas shock is located between rear lift gate and body on the driver side | (8) Inflatable Restraint Electronic Frontal Sensor (EFS)—Located on the front of the vehicle in the engine compartment |