

Impact Bar Anchor Plate Replacement - Rear Bumper

Removal Procedure

Caution: Refer to *Approved Equipment for Collision Repair Caution* on page 1-1.

1. Disable the SIR system. Refer to *SIR Disabling and Enabling Zones* on page 1-129.


Caution: Refer to *Battery Disconnect Caution* on page 1-1.

2. Disconnect the negative battery cable.
3. Remove all related panels and components.
4. Repair as much of the damage as possible. Refer to *Dimensions - Body (Sedan)* on page 1-2.
5. Remove the sealers and anti-corrosion materials from the repair area, as necessary. Refer to *Anti-Corrosion Treatment and Repair*.


Important: Note the number and location of the factory welds for installation of the rear rail assembly rear extension.

6. Locate and drill out all the necessary factory welds.


7. Remove the rear rail assembly rear extension.

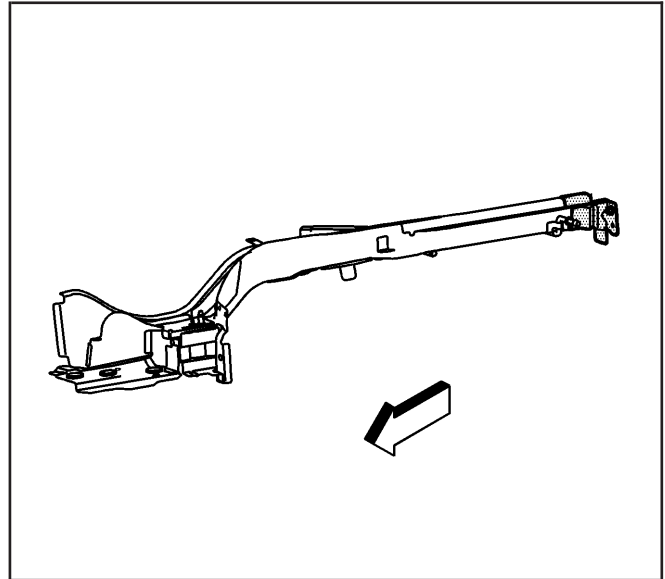


1203191

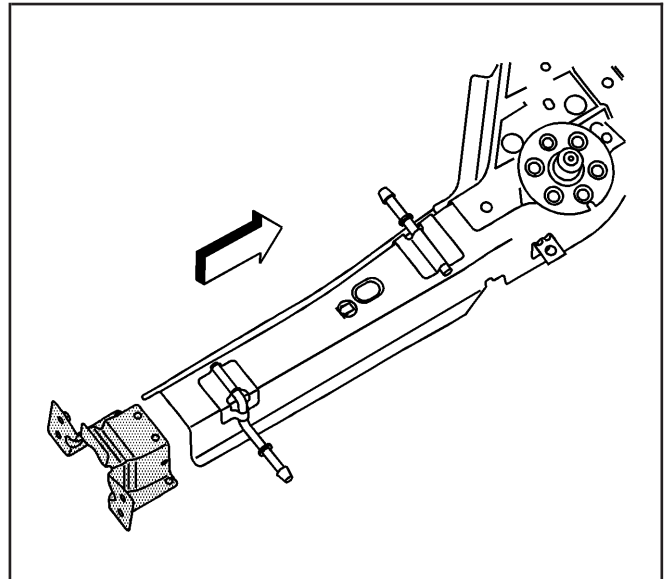


1203207

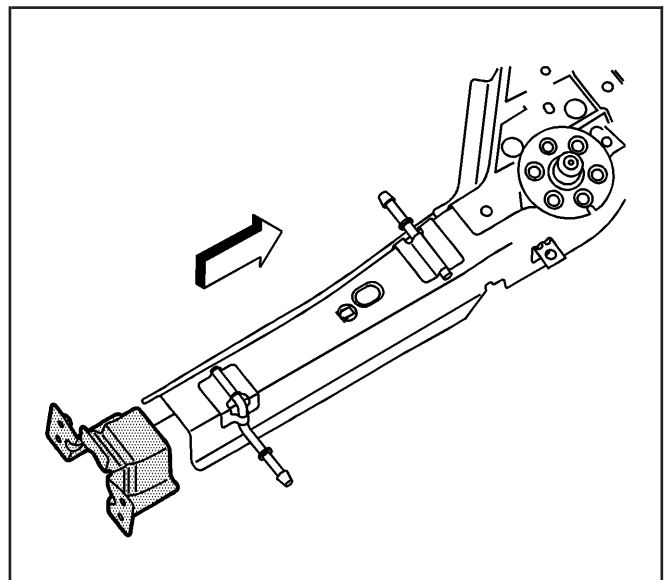


1203223

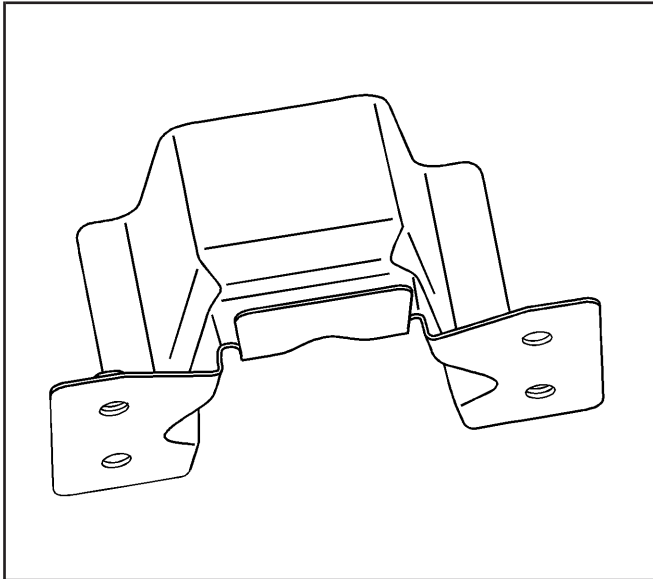

1203233

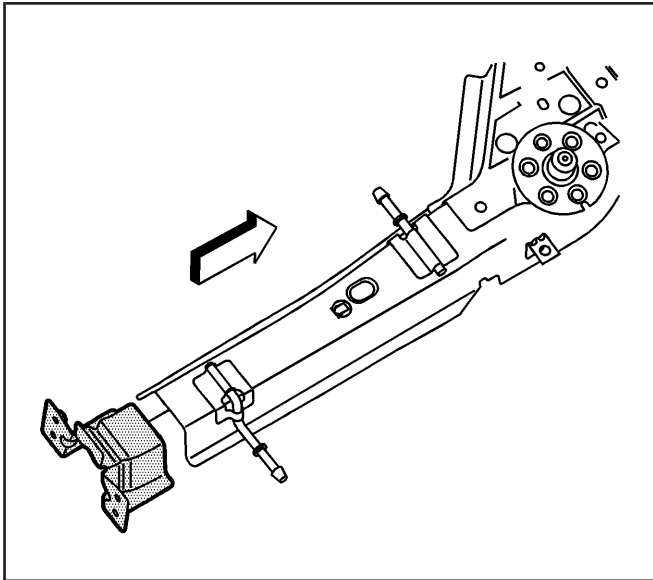

1203223

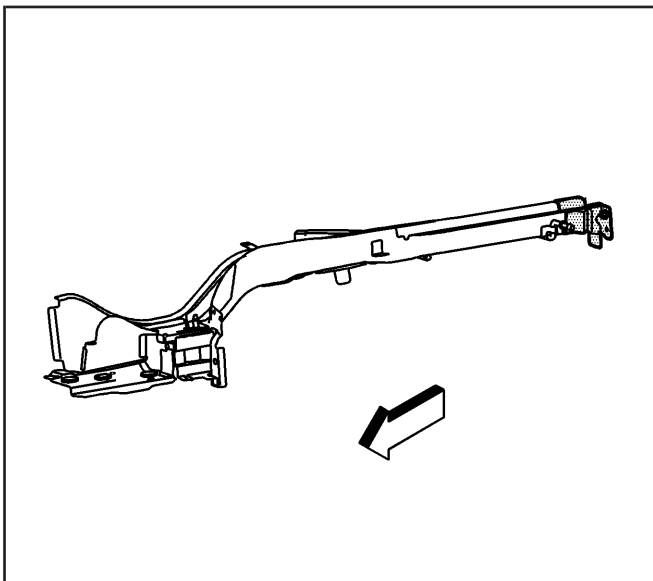

1203191

Installation Procedure

Important: If the location of the original plug weld holes can not be determined, space the plug weld holes every 40 mm (1½ in) apart.

1. Drill 8 mm (5/16 in) plug weld holes in the service part as necessary in the corresponding locations noted on the original panel.
2. Prepare all mating surfaces as necessary.
3. Apply 3M® Weld-Thru coating P/N 05916 or equivalent to all mating surfaces.

4. Position the anchor plate to the rear rail.

5. Plug weld accordingly.
6. Clean and prepare all of the welded surfaces.
7. Install all of the related panels and components.
8. Apply the sealers and anti-corrosion materials to the repair area, as necessary. Refer to *Anti-Corrosion Treatment and Repair*.
9. Paint the repaired area. Refer to *Basecoat/Clearcoat Paint Systems*.

Caution: Refer to **Battery Disconnect Caution** on page 1-1.

10. Connect the negative battery cable.
11. Enable the SIR system. Refer to *SIR Disabling and Enabling Zones* on page 1-129.