


Diagnostic Information and Procedures

SIR Disabling and Enabling Zones

Important: Refer to *SIR Service Precautions* on page 1-130 before disabling the SIR system.

The SIR system has been divided into Disabling and Enabling Zones. When performing service on or near SIR components or SIR wiring, it may be necessary to disable the SIR components in that zone.

It may be necessary to disable more than one zone depending on the location of other SIR components and the area being serviced, refer to *SIR Zone Identification Views* on page 1-127. Refer to the illustration below, to identify the specific zone or zones in which service will be performed. After identifying the zone or zones, proceed to the disabling and enabling procedures for that particular zone or zones.

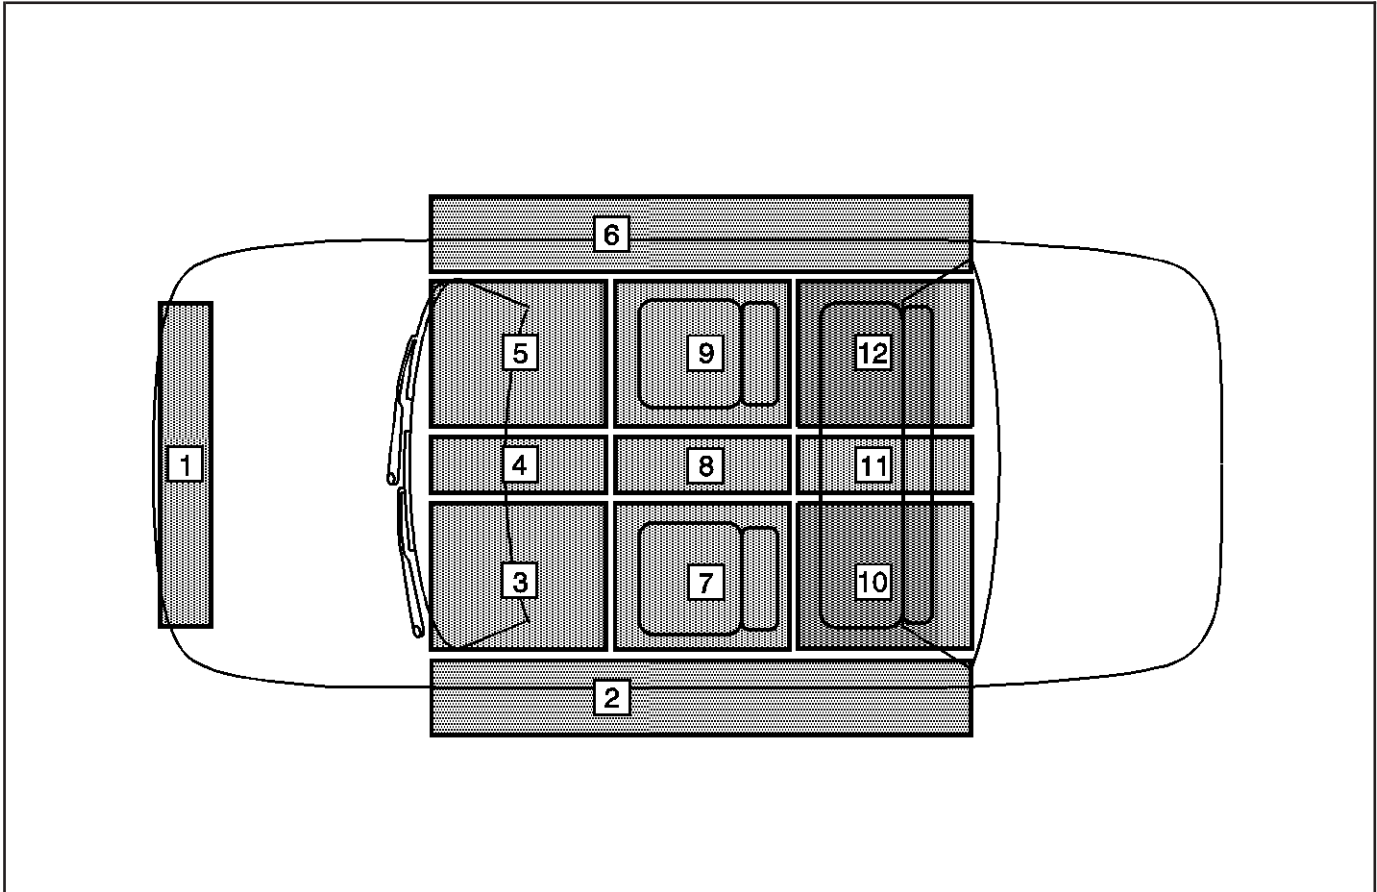

824286

Zone	Description
1	Inflatable Restraint Front End Sensor – Left and Right. Refer to <i>SIR Disabling and Enabling Zone 1</i> on page 1-131
2	Inflatable Restraint Roof Rail Module–Left, Seat Belt Pretensioner–LF and Side Impact Sensor (SIS)-Left. Refer to <i>SIR Disabling and Enabling Zone 2</i> on page 1-133.
3	Inflatable Restraint Steering Wheel Module and Coil. Refer to <i>SIR Disabling and Enabling Zone 3</i> on page 1-137.
4	Not Used
5	Inflatable Restraint I/P Module–Refer to <i>SIR Disabling and Enabling Zone 5</i> on page 1-139.
6	Inflatable Restraint Roof Rail Modul –Right, Seat Belt Pretensioner–RF and Side Impact Sensor (SIS)-Right. Refer to <i>SIR Disabling and Enabling Zone 6</i> on page 1-141.
7	Not Used
8	Inflatable Restraint Sensing and Diagnostic Module (SDM). Refer to <i>SIR Disabling and Enabling Zone 8</i> on page 1-147.
9	Not Used
10	Not Used
11	Not Used
12	Not Used