


1316302

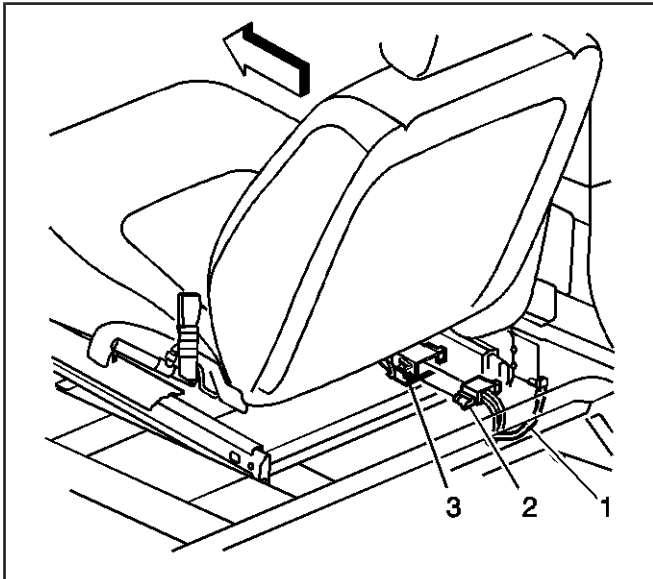

854381

SIR Disabling and Enabling Zone 9

Disabling Procedure


1. Turn the steering wheel so that the vehicle's wheels are pointing straight ahead.
2. Place the ignition switch to the OFF position.
3. Remove the key from the ignition switch.
4. Locate the body control module fuse center then remove fuse center cover.

Important: This SDM has two fused power inputs. To ensure there is no unwanted SIR deployment, personal injury, or unnecessary SIR system repairs, remove both AIR BAG (IGN) and AIR BAG (BATT) fuses from the body control module fuse center. With the AIR BAG fuses removed and the ignition switch in the ON position, the AIR BAG warning indicator illuminates. This is normal operation, and does not indicate an SIR system malfunction.

5. Locate and remove the AIR BAG (IGN) and AIR BAG (BATT) fuses from the body control module fuse center.
6. Remove the connector position assurance (CPA) (1) from the RF/passenger side impact module yellow connector (3) which is located under the passenger seat.
7. Disconnect the vehicle harness yellow connector (2) from the RF side impact module yellow connector (3).


Enabling Procedure

1. Remove the key from the ignition switch.
2. Connect the vehicle harness yellow connector (2) to the RF side impact module yellow connector (3).
3. Install the CPA (1) to the RF side impact module yellow connector (3).

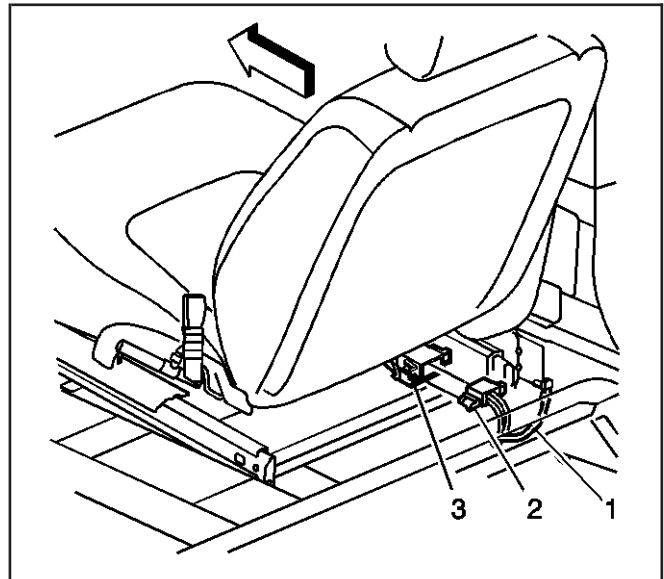

854381

4. Install the AIR BAG (IGN) and AIR BAG (BATT) fuses into the body control module fuse center (1).
5. Use caution while reaching in and turn the ignition switch to the ON position.
The AIR BAG indicator will flash then turn OFF.
6. Perform the Diagnostic System Check – Vehicle if the AIR BAG warning indicator does not operate as described. Refer to *Diagnostic System Check - Vehicle*.

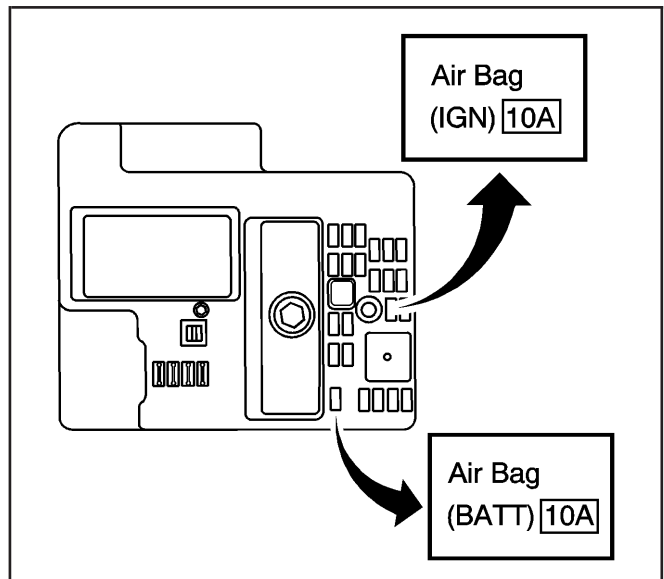

1316302