


1203005

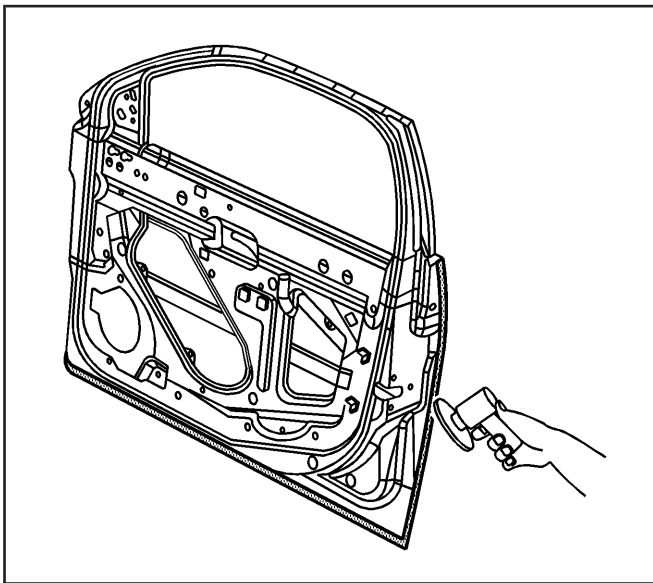

1203016

Panel Replacement - Front Door Outer

Removal Procedure

Caution: Refer to *Approved Equipment for Collision Repair Caution* on page 1-1.


Important: Before beginning the repair, refer to *Metal Panel Bonding* on page 1-116 for proper adhesive applicator preparations and general information.

Caution: Refer to *Battery Disconnect Caution* on page 1-1.

1. Disconnect the negative battery cable.
2. Disable the SIR system. Refer to *SIR Disabling and Enabling Zones* on page 1-129.
3. Remove the door from the vehicle. Refer to *Door Replacement - Side Front*.
4. Remove the outer door handle. Refer to *Door Handle Rod Adjustment - Front Outside*.
5. Remove the outside rear view mirror. Refer to *Mirror Replacement*.
6. Locate and drill out all factory welds. Note the number and location of welds at the upper window frame and mirror locations.
7. Grind the edges of the door outer panel to separate the outer door panel from the door shell.


Caution: Inspection of the door guard beam for damage must be performed before replacement of the door outer panel. If damage to the door guard beam is found the door must be replaced. Failure to do so may compromise the structural integrity of the vehicle and may cause personal injury if the vehicle is involved in a collision.

8. Remove the outer door panel.
9. Remove the sealers and anti-corrosion materials from the repair area, as necessary. Refer to *Anti-Corrosion Treatment and Repair*.

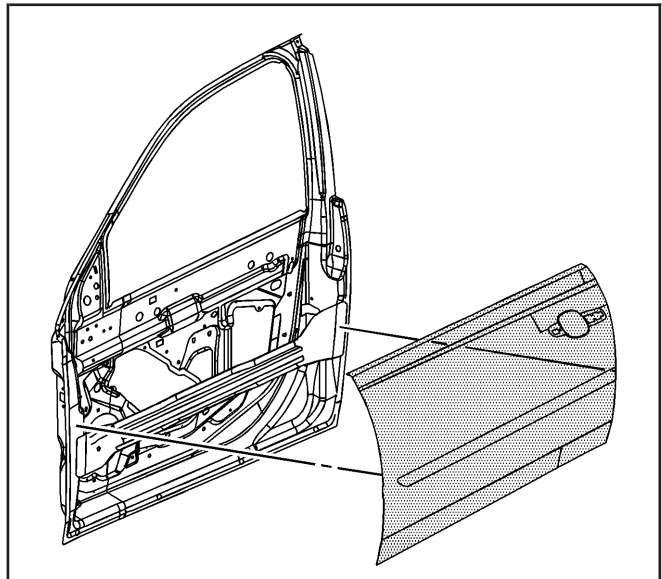

1202993


10. Straighten the edges of the door shell.

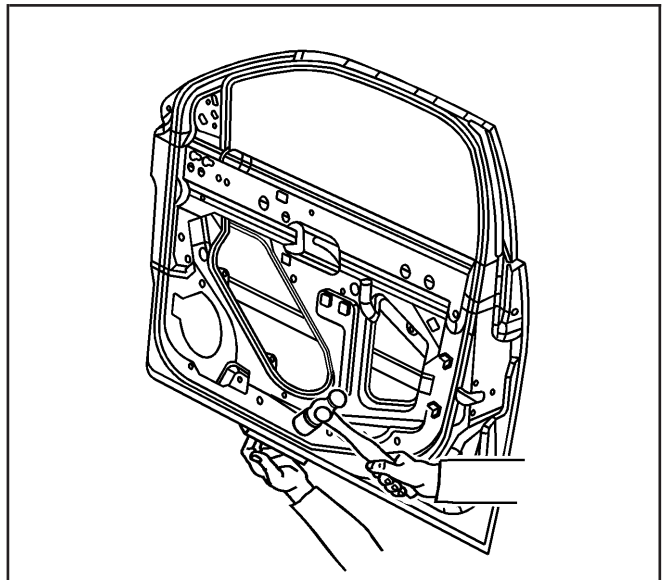


1203015

Installation Procedure

1. Using a grinding disk grind the surface of the door shell mating flanges to bare steel.

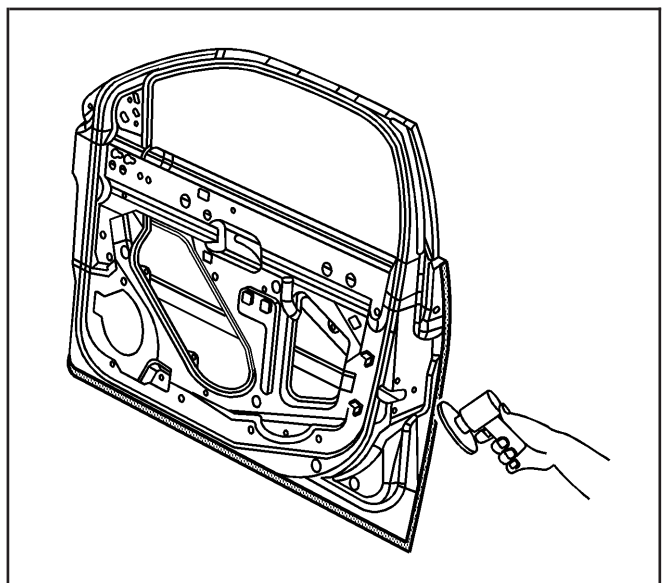


1203016

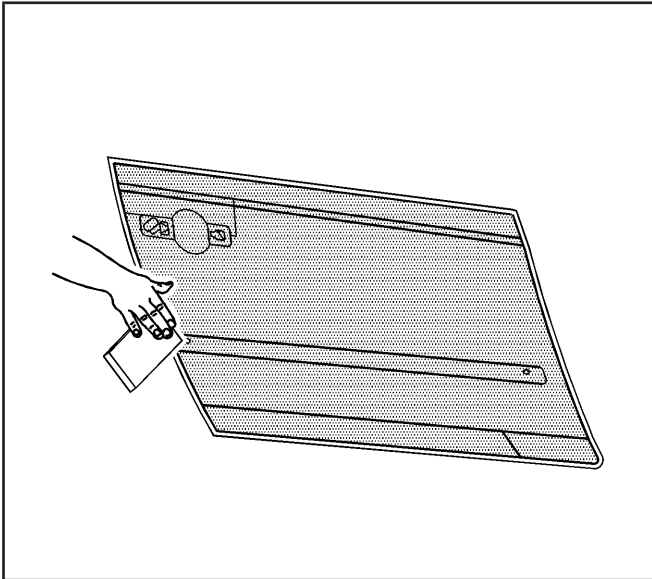

1203018

2. Scuff the opposing mating surfaces of the door outer panel to remove the gloss of the E-Coat.

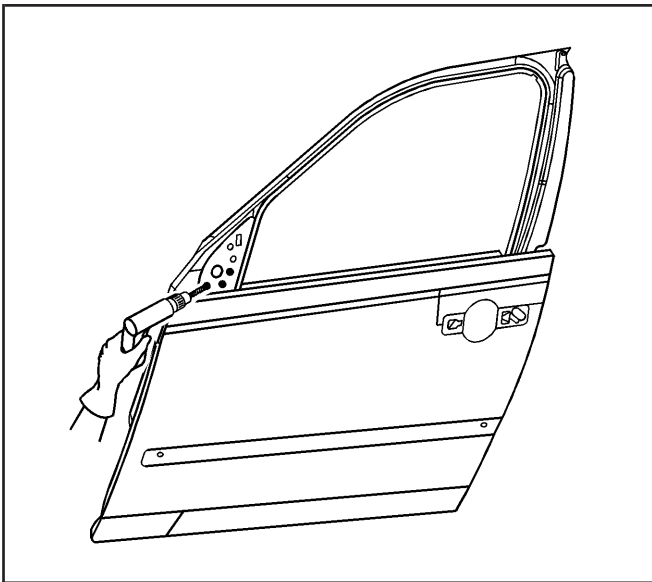


1203005

3. Drill 8 mm (5/16 in) plug weld holes as necessary in the locations noted from the original panel.

Important: If the location of the original plug-weld holes can not be determined, space plug weld holes every 40 mm (1 in) apart.

4. Clean the mating surfaces.

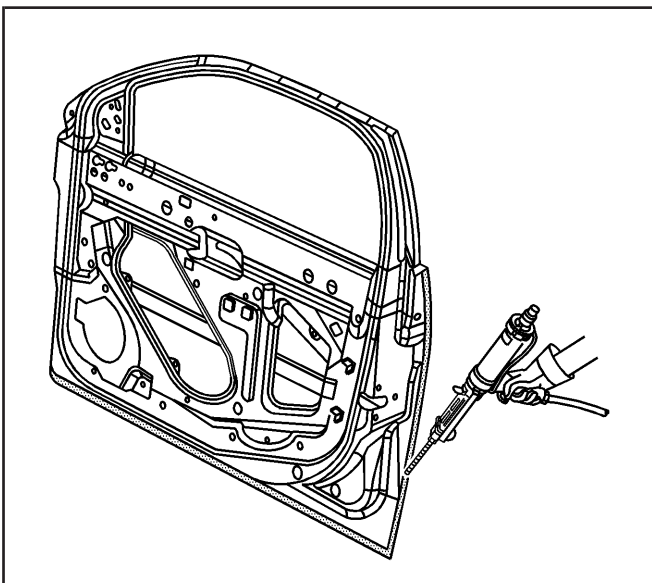


1203019

Important: The adhesive has a 40–50 minute working time. Do not allow the door to totally cure off the vehicle, as proper alignment of the door outer panel to the door shell will be difficult.

5. Apply a 3–6 mm (1/8–1/4 in) bead of metal panel bonding adhesive GM P/N 12378566/7 (Canadian P/N 88901674/5) or equivalent, to both of the mating surfaces.
6. Using a small acid brush, spread a coat of adhesive to cover all the bare metal surfaces to ensure corrosion protection.


Important: Do NOT pull the panels apart after joined together. Slide the panels against each other to realign the panels.

7. Install the door outer panel to the door shell.
8. Clamp the door outer panel into position as required.

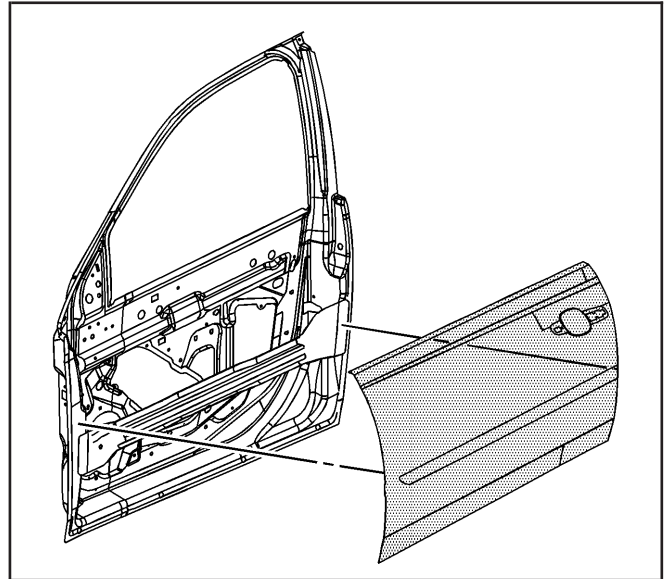


1202993


9. Using a hammer re-hem the hem flanges around the door shell.
Continue to hammer in stages along the hem flanges.
10. Using lacquer thinner remove the excess adhesive from the door panel area.
11. Install the door to the vehicle. Inspect the door outer panel for proper alignment. Adjust the alignment as required. Refer *Door Replacement - Side Front*.

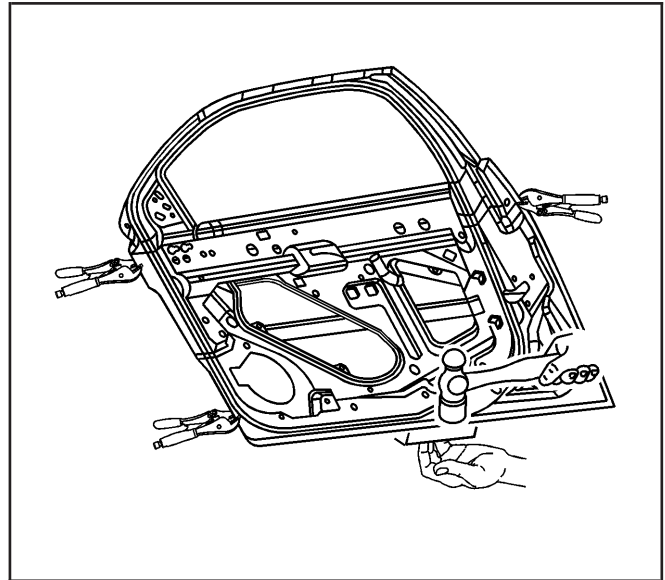

1203022

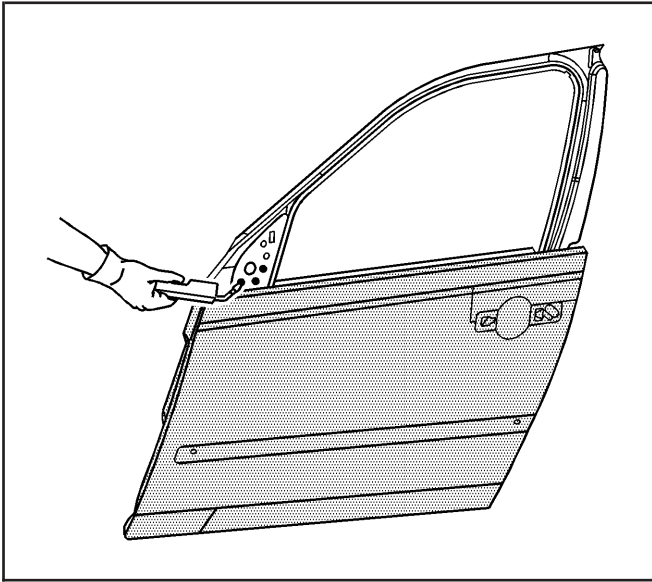

1203026

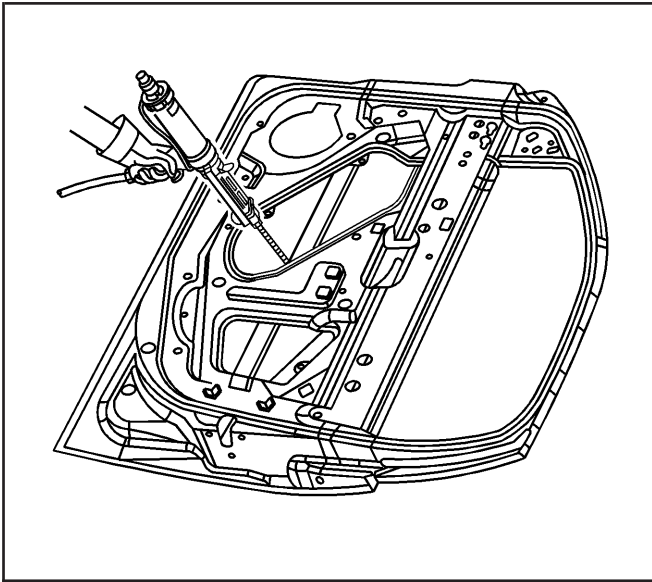

1203023

12. Metal-inert gas (MIG) weld the door outer panel to the door frame in the locations noted at the upper door frame.
13. Clean and prepare all welded surfaces.

14. Apply Fusor super flexible anti-flutter foam – fast set, Fusor P/N 121/124 or equivalent in 4–5 evenly spaced locations between the door outer panel and the inner safety beam.
15. Apply sealers and anti-corrosion materials to the repair area as necessary. Refer to *Anti-Corrosion Treatment and Repair*.
16. Paint the repaired area. Refer to *Basecoat/Clearcoat Paint Systems*.
17. Install the outer door handle. Refer to *Door Handle Rod Adjustment - Front Outside*.
18. Install the outside rear view mirror. Refer to *Mirror Replacement*.
19. Enable the SIR system. Refer to *SIR Disabling and Enabling Zones on page 1-129*.

Caution: Refer to *Battery Disconnect Caution on page 1-1*.

20. Connect the negative battery cable.